WICE-ME User's Guide

力浦電子實業股份有限公司
LEAP ELECTRONIC CO., LTD.

§ **WICE-ME User's Guide** §

WICE-ME-SPI Hardware Connection

Power Cable

USB Cable

2 x 4 PIN Socket

1st PIN

IC position
(The socket is only
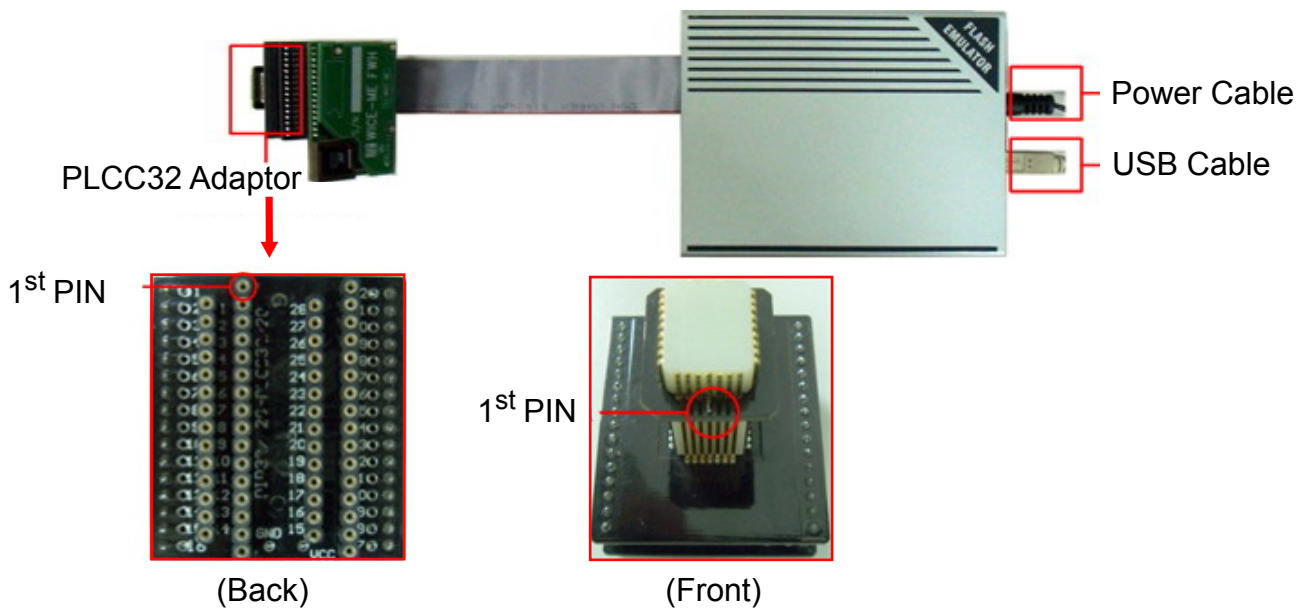for to 207mil)
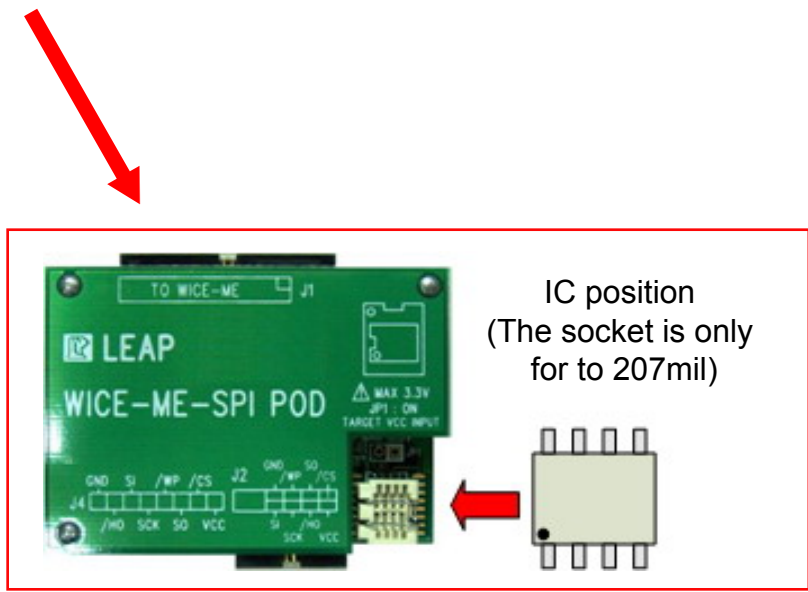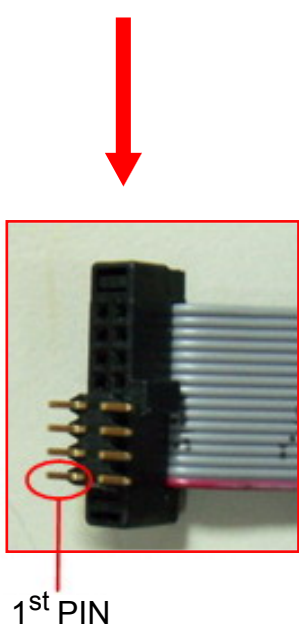
§   **WICE-ME User's Guide**   §

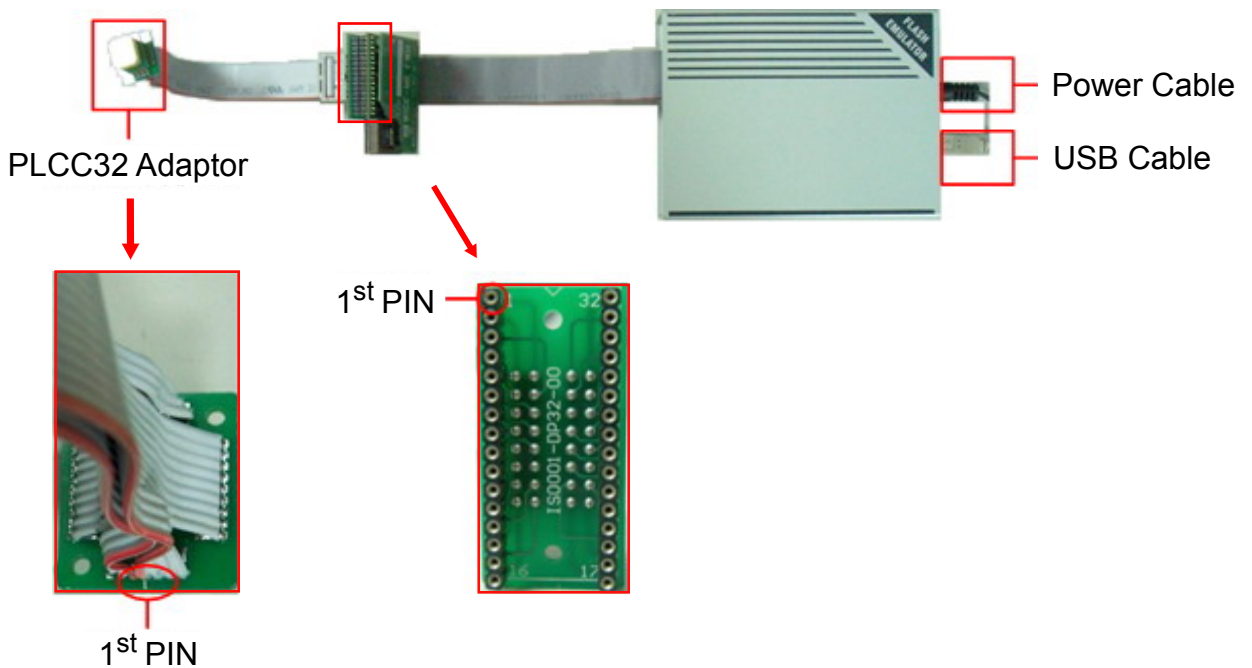## WICE-ME-FWH Hardware Connection

Please must pay attention on the 1st Pin connection.

1. Hard Type Adaptor
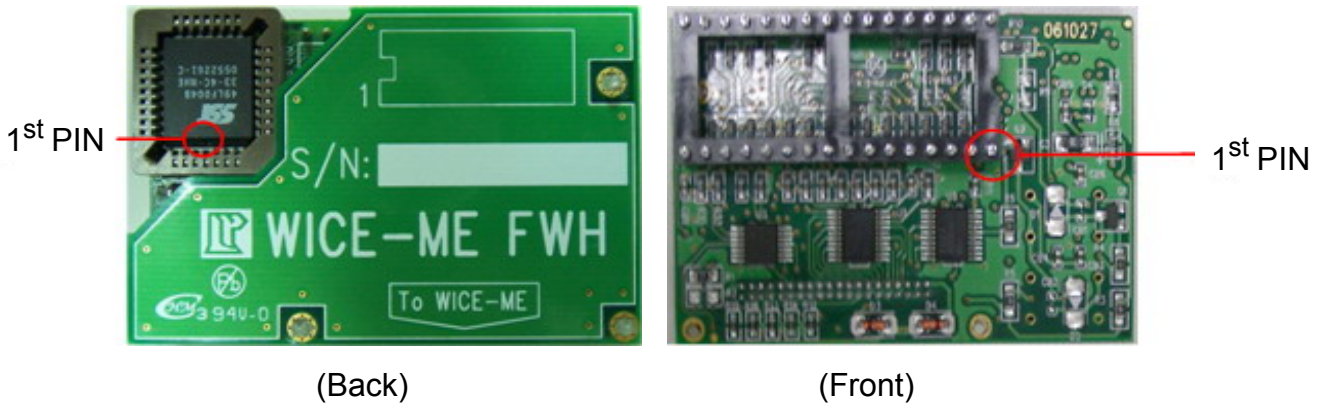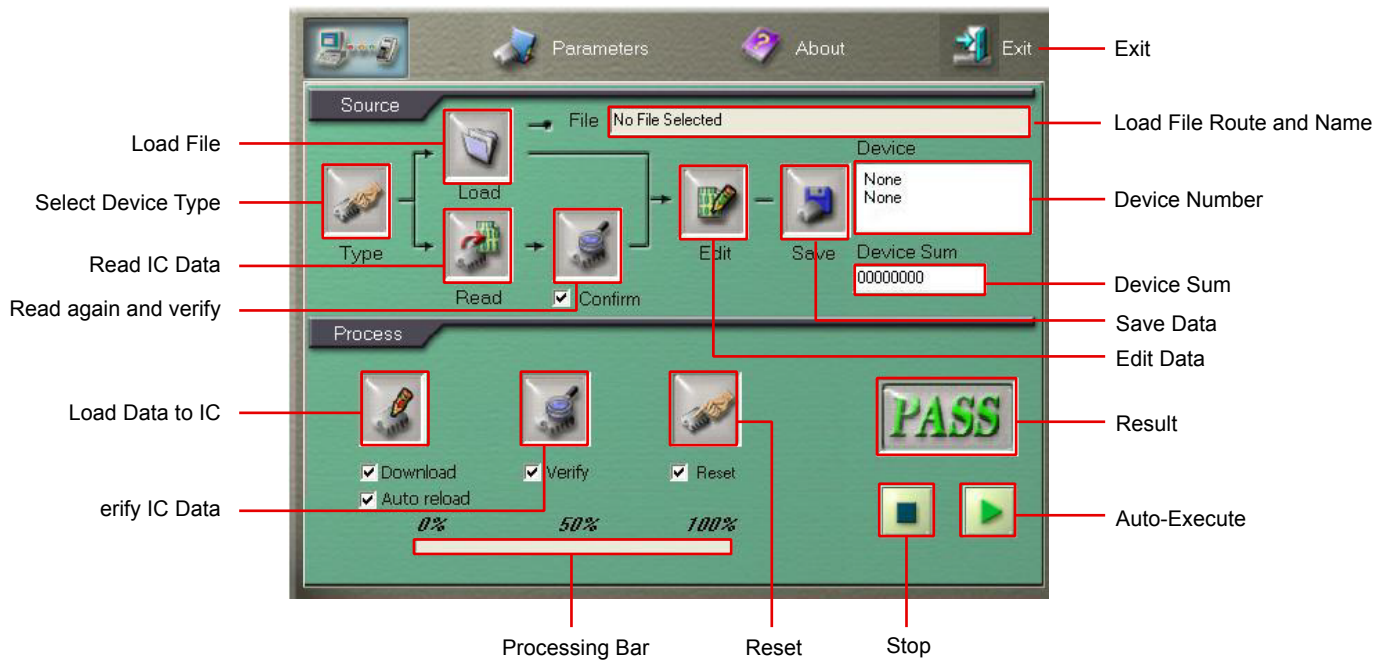

PLCC32 Adaptor

1st PIN

1st PIN

(Back)   (Front)

Power Cable

USB Cable

2. Flat Cable Adaptor

PLCC32 Adaptor

1st PIN

1st PIN

Power Cable

USB Cable

§ **WICE-ME User's Guide** §

WICE-ME-FWH POD illustration：

1st PIN

1st PIN

(Back) (Front)

Operating Introduction

Operating Step:

Step1: Select device.

Step2: Execute Load and Read File for checking the checksum.

Step3: Select function(Such as：Download, Verify, Reset, etc…).

Step4: Select Auto-Execute.

Step5: Start emulating if the result displays PASS.

3